



Original	Replacement
Power Off	Shift + Power
Power	Power
DVD	2
VDP	Shift + 2
Tuner	6
Shift	Smart / List
TV/DBS	1
V.AUX	7
Phono	9
Channel+	CH+ / Page+
VCR-1	4
CD	3
MD/Tape-1	5
Channel-	CH- / Page-
VCR-2	Shift + 4
<<	<< / Tune-
>>	>> / Tune+

Original	Replacement
Stop	Stop / Hold
Play	Play / Slow
I<</Volume-	I<< / Preset-
>>I/Volume+	>>I / Preset+
Pause	Pause / Step / Freeze
</Disc Skip+	Rec / Rec Mode
Dolby/DTS	Zoom / Size
Direct	Audio / Lang I/II
Master Vol+	Vol+
DSP Simulation	Picture / Format
5CH / 7CH Stereo	Subtitle / EQ
Stereo	Sound / Title
Master Vol-	Vol-
Input Mode	Red / Netflix / Search
Input Analog	Green / APP / Repeat
Ext. In	Yellow / YouTube / Repeat
Muting	Mute / Dimmer





Original	Replacement
Tuning Down	Shift + << /
Tuning Up	Shift + >> /
System Setup	Setup / OPT /
Up	Up
Surround	Eject / Surround
Band	Shift + Stop /
Enter	OK
CH Select	Menu / Home
Mode Tuner	Shift + Play /
Left	Left
Right	Right
Memory	Shift + Pause / Step /
Status / Display	Display / Media
Down	Down
On Screen	Info / Angle
T.Tone	Text / Goto
Multi EQ	Guide / EPG / -/--

Original	Replacement
Output	Fav / Marker / PC
Speaker	AV / Input / RDS

