



| Original | Replacement |
|----------|-------------------|
| | Power |
| | + Shift + Power |
| | Smart |
| | + Shift + Smart |
| | + Shift + 1 |
| | + Shift + 2 |
| | + Shift + 3 |
| | + Shift + 4 |
| | + Shift + 5 |
| | + Shift + 6 |
| | + Shift + 7 |
| | + Shift + 8 |
| | + Shift + 9 |
| | + Shift + Guide |
| | + Shift + 0 |
| | + Shift + Pre Ch |
| | + Shift + Info |

| Original | Replacement |
|----------|-------------|
| | TV/R |
| | Blue |
| | Red |
| | Green |
| | Yellow |
| | Ch + |
| | Ch - |
| | AV |
| | Vol + |
| | Vol - |
| | Mute |
| | Info |
| | Menu |
| | Media |
| | Up |
| | Back |
| | Down |








| Original | Replacement | Original | Replacement |
|-------------|-------------|-----------------|-------------|
| | | | |
| Right | Right | Pure | Pre Ch |
| | | | |
| Left | Left | 1 | 1 |
| | | | |
| Enter | Ok | 2 | 2 |
| | | | |
| Play | Play | 3 | 3 |
| | | | |
| >>/Mode | >> | 4 | 4 |
| | | | |
| <</Band | << | 5 | 5 |
| | | | |
| >>I/Tuning▲ | >>I | 6 | 6 |
| | | | |
| Stop | Stop | 7 | 7 |
| | | | |
| Pause | Pause | 8 | 8 |
| | | | |
| I<</Tuning▼ | I<< | 9 | 9 |
| | | | |
| Multeq | Options | 0 | 0 |
| | | | |
| DYN EQ/VOL | Dual | +10 | Guide |
| | | | |
| A-DSX | Subt | Shift | List |
| | | | |
| Restorer | Exit | Link Menu/Power | Eject |
| | | | |
| Standard | Text | TV Input | D. Menu |
| | | | |
| D/ST | Format | Sleep | Sleep |
| | | | |
| Simulation | 3D | Memory/Party | Rec |





 

 

 



 

 
 

 
| Original | Replacement |
|---|--|
|  Power On |  Power |
|  Power Off |  +  Shift + Power |
|  Zone Device On |  Smart |
|  Zone Device Off |  +  Shift + Smart |
|  Net/USB |  +  Shift + 1 |
|  iPod/Play |  +  Shift + 2 |
|  DVD |  +  Shift + 3 |
|  BD |  +  Shift + 4 |
|  Tuner |  +  Shift + 5 |
|  Dock |  +  Shift + 6 |
|  SAT TU |  +  Shift + 7 |
|  SAT/CBL |  +  Shift + 8 |
|  Game |  +  Shift + 9 |
|  V.AUX |  +  Shift + Guide |
|  Phono |  +  Shift + 0 |
|  CD |  +  Shift + Pre Ch |
|  DVR |  +  Shift + Info |

| Original | Replacement |
|--|---|
|  TV |  TV/R |
|  Quick Select 1/BD |  Red |
|  Quick Select 2/(SAT/CBL) |  Green |
|  Quick Select 3 |  Yellow |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Menu |  Menu |
|  CH Level/Top |  Info |
|  Return |  Back |
|  Search/Setup |  AV |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |





 

 











 

 
 

 
 
 

 

 

 

| Original | Replacement |
|--|---|
|  Enter |  Ok |
|  <</Band |  << |
|  Play |  Play |
|  >>/Mode |  >> |
|  >>I/Tuning/▲ |  >>I |
|  Stop |  Stop |
|  Pause |  Pause |
|  I<</Tuning▼ |  I<< |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |

| Original | Replacement |
|---|--|
|  0 |  0 |
|  +10 |  Guide |
|  Shift |  3D |
|  Link Menu/Power |  Media |
|  TV Input |  Shift + AV |
|  Sleep |  Sleep |
|  Memory/Party |  Rec |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





 

 




 


| Original | Replacement |
|---|--|
|  Power On |  Power |
|  Power Off |  +  Shift + Power |
|  Zone Device On |  Smart |
|  Zone Device Off |  +  Shift + Smart |
|  NET/USB |  +  Shift + 1 |
|  iPod/Play |  +  Shift + 2 |
|  DVD |  +  Shift + 3 |
|  BD |  +  Shift + 4 |
|  Tuner |  +  Shift + 5 |
|  Dock |  +  Shift + 6 |
|  SAT TU |  +  Shift + 7 |
|  SAT/CBL |  +  Shift + 8 |
|  Game |  +  Shift + 9 |
|  V.AUX |  +  Shift + Guide |
|  Phono |  +  Shift + 0 |
|  CD |  +  Shift + Pre Ch |
|  DVR |  +  Shift + Info |

| Original | Replacement |
|--|---|
|  TV |  TV/R |
|  Quick Select 1/BD |  Red |
|  Quick Select 2/(SAT/CBL) |  Green |
|  Quick Select |  Yellow |
|  CH+ |  Ch + |
|  CH- |  Ch - |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  CH.Level/Top |  Info |
|  Menu |  Menu |
|  Search/Setup |  AV |
|  Return |  Back |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |





| Original | Replacement |
|---|---|
|  Enter |  Ok |
|  <</Band |  << |
|  Play |  Play |
|  >>/Mode |  >> |
|  >>I/Tuning▲ |  >>I |
|  Stop |  Stop |
|  Pause |  Pause |
|  I<</Tuning▼ |  I<< |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  0 |  0 |

| Original | Replacement |
|---|---|
|  9 |  9 |
|  +10 |  Guide |
|  Shift |  3D |
|  Link Menu/Power |  Media |
|  Tv Input |  D. Menu |
|  Sleep |  Sleep |
|  Memory/Party |  Rec |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

