 




Original	Replacement
	Power
	CBL/SAT
	Media Player
	Blu-ray
	Game1
	Game2
	AUX1
	AUX2
	Tv Audio
	Tuner
	USB
	CD
	Bluetooth
	Internet Radio
	CH/Page Up

Original	Replacement
	Eco
	Volume+
	CH/Page Down
	Mute
	Volume-
	Info
	Option
	Up
	Left
	Enter
	Right
	Back
	Down
	Setup
	I<</Tune-
	Play
	Pause

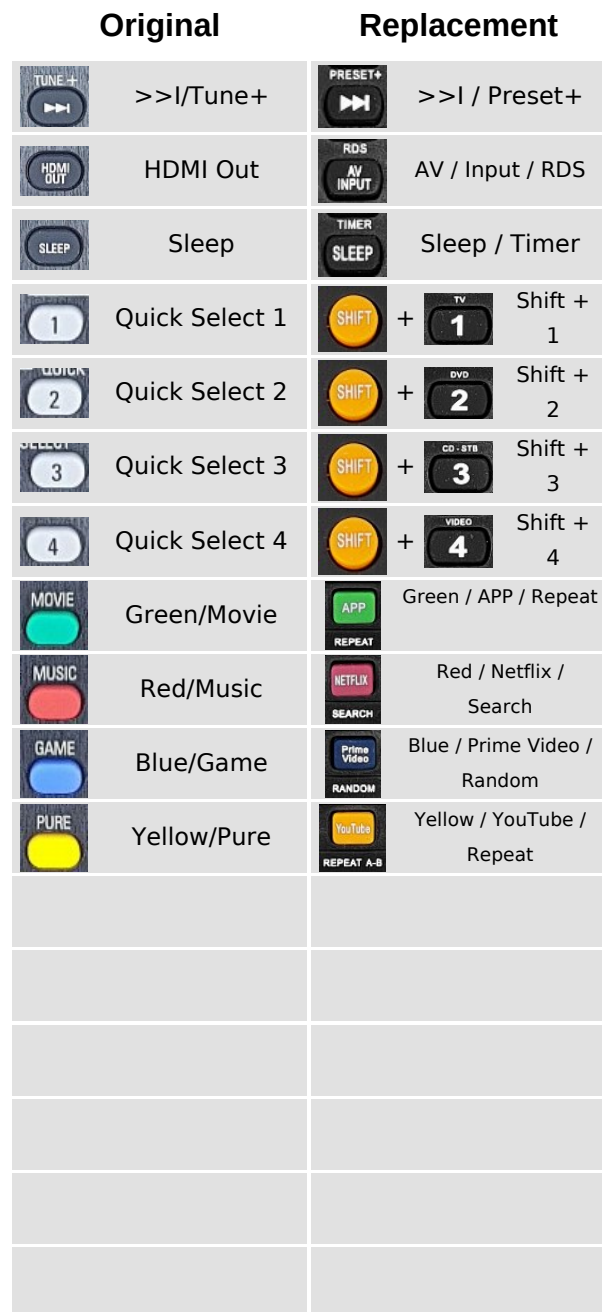

 




Original	Replacement
 Power	 Power
 CBL/SAT	 1
 Media Player	 2
 Blu-ray	 0
 Game1	 4
 Game2	 5
 AUX1	 7
 AUX2	 Guide / EPG / -/--
 Tv Audio	 Audio / Lang I/II
 Tuner	 6
 USB	 8
 CD	 3
 Bluetooth	 9
 Phono	 Fav / Marker / PC
 Internet Radio	 Display / Media
 CH/Page Up	 TV/Radio /
	 CH+ / Page+

Original	Replacement
 Volume+	 Vol+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I/Tune+	 >>I / Preset+
 Sleep	 Sleep / Timer
 Quick Select 1	 Shift + 1
 Quick Select 2	 Shift + 2



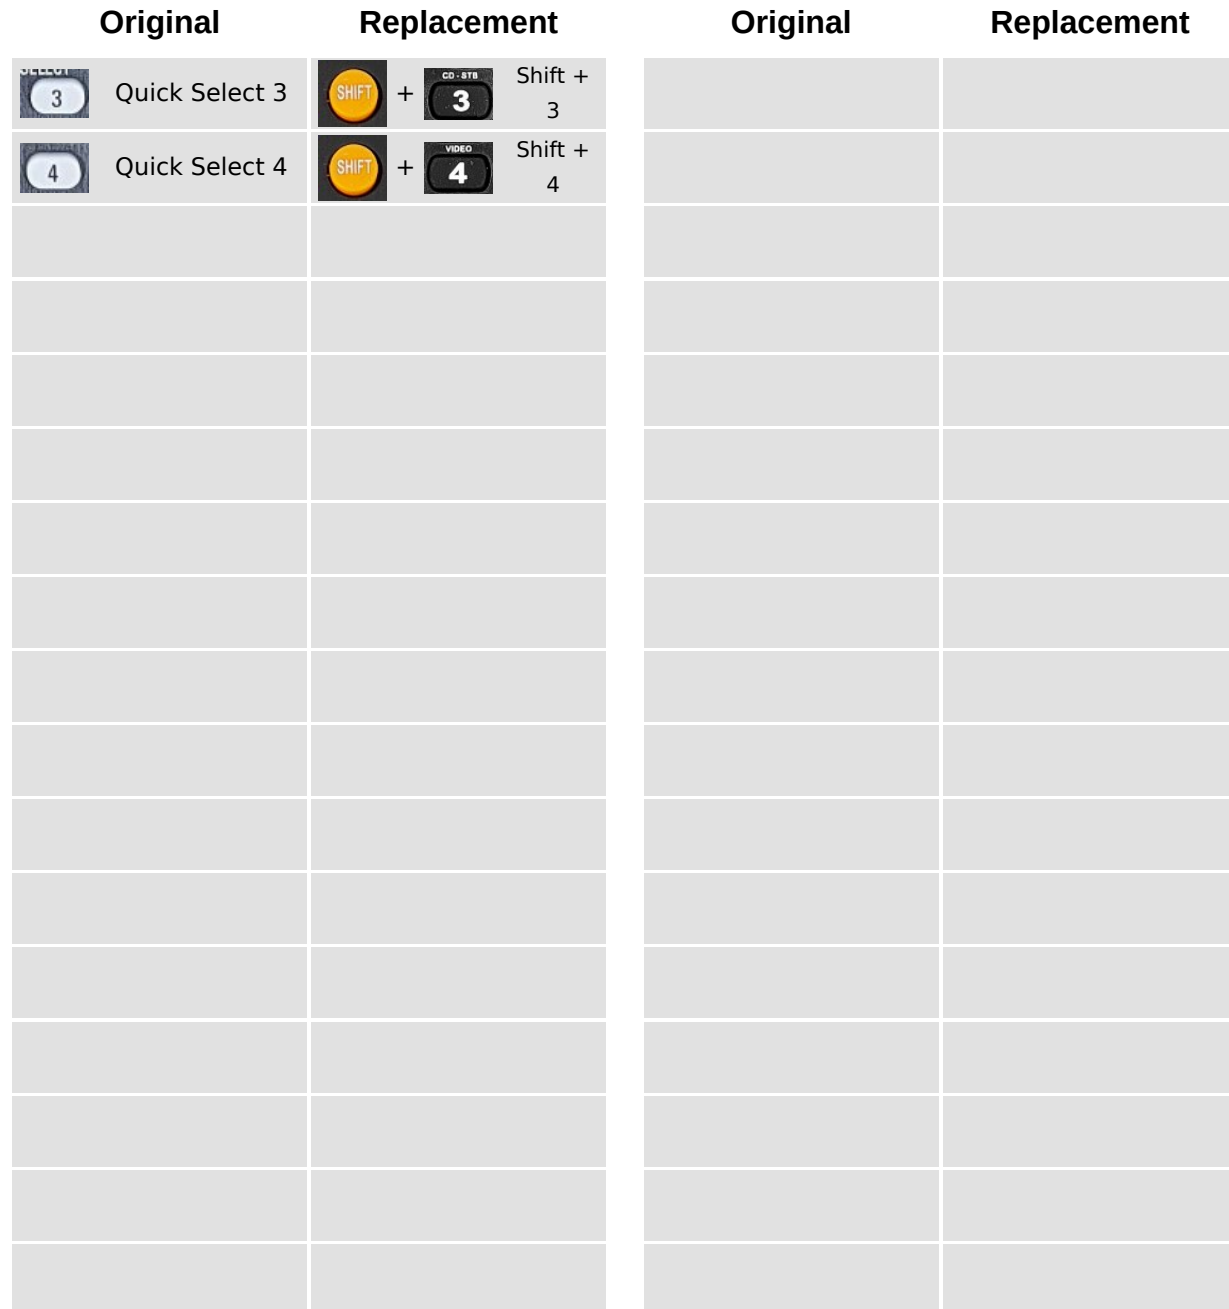



Original	Replacement
 Power	 Power
 CBL/SAT	 1
 Media Player	 2
 Blu-ray	 0
 Game1	 4
 Game2	 5
 AUX1	 7
 AUX2	 Guide / EPG / -/--
 Tv Audio	 Audio / Lang I/II
 Tuner	 6
 USB	 8
 CD	 3
 Bluetooth	 9
 Phono	 Fav / Marker / PC
 Internet Radio	 Display / Media
 CH/Page Up	 TV/Radio /
	 CH+ / Page+

Original	Replacement
 Volume+	 Vol+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I/Tune+	 >>I / Preset+
 Sleep	 Sleep / Timer
 Quick Select 1	 Shift + 1
 Quick Select 2	 Shift + 2



