



 
Original	Replacement
Off	Shift + Power
On Source	Power
Quick Select 1/(DVD)	Red / Netflix / Search
Quick Select 2/(SAT/CBL)	Green / APP / Repeat
Quick Select 3/(VCR/iPod)	Yellow / YouTube / Repeat
DVD	2
TV	1
iPod	9
Net/USB	8
DTU/TU	7
SAT TU	0
Play	Play / Slow
Stop	Stop / Hold
Memory/Skip+/TV Input	AV / Input / RDS
Pause/Shift	Pause / Step / Freeze
Vol+	Vol+
<< TU	<< / Tune-

Original	Replacement
>> TU	>> / Tune+
CH-/I<<	CH- / Page-
CH-/I<<	I<< / Preset-
CH+/>>I	CH+ / Page+
CH+/>>I	>>I / Preset+
Vol-	Vol-
Mute	Mute / Dimmer
Menu	Menu / Home
Up	Up
CH Level/HDMI Control	Smart / List
Left	Left
Enter	OK
Right	Right
Setup/Search	Setup / OPT /
Down	Down
Return	Back / Return
Source Select/Top Menu	D.Menu / Top

Menu





Original	Replacement
 Off	 Shift + Power
 On/Source	 Power
 Quick Select 1/(DVD)	 Red / Netflix / Search
 Quick Select 2/(SAT/CBL)	 Green / APP / Repeat
 Quick Select 3/(VCR/iPod)	 Yellow / YouTube / Repeat
 DVD	 2
 TV	 1
 iPod	 9
 NET/USB	 8
 DTU/TU	 7
 SAT TU	 0
 Play	 Play / Slow
 Stop	 Stop / Hold
 Memory/Skip+/Tv Input	 AV / Input / RDS
 Pause/Shift	 Pause / Step / Freeze
 Vol+	 Vol+
 << TU	 << / Tune-

Original	Replacement
 >> TU	 >> / Tune+
 CH-/I<<	 CH- / Page-
 CH-/I<<	 I<< / Preset-
 CH+/>>I	 CH+ / Page+
 CH+/>>I	 >>I / Preset+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup/Search	 Setup / OPT /
 Down	 Down
 Return	 Back / Return





Original	Replacement
 Off	 Shift + Power
 On Source	 Power
 Quick Select 1/(DVD)	 Red / Netflix / Search
 Quick Select 2/(SAT/CBL)	 Green / APP / Repeat
 Quick Select 3/(VCR/iPod)	 Yellow / YouTube / Repeat
 DVD	 2
 TV	 1
 iPod	 9
 Net/USB	 8
 DTU/TU	 7
 SAT TU	 0
 Play	 Play / Slow
 Stop	 Stop / Hold
 Memory/Skip+/Tv Input	 AV / Input / RDS
 Pause/Shift	 Pause / Step / Freeze
 Vol+	 Vol+
 << TU	 << / Tune-

Original	Replacement
 >> TU	 >> / Tune+
 CH-/I<<	 CH- / Page-
 CH-/I<<	 I<< / Preset-
 CH+/>>I	 CH+ / Page+
 CH+/>>I	 >>I / Preset+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup/Search	 Setup / OPT /
 Down	 Down
 Return	 Back / Return





Original	Replacement
Off	Shift + Power
On/Source	Power
Quick Select 1/(DVD)	Red / Netflix / Search
Quick Select 2/(SAT/CBL)	Green / APP / Repeat
Quick Select 3/(VCR/iPod)	Yellow / YouTube / Repeat
DVD	2
TV	1
iPod	9
NET/USB	8
DTU/TU	7
SAT TU	0
Play	Play / Slow
Stop	Stop / Hold
Memory/Skip+/Tv Input	AV / Input / RDS
Pause/Shift	Pause / Step / Freeze
Vol+	Vol+
<< TU	<< / Tune-

Original	Replacement
>> TU	>> / Tune+
CH-/I<<	CH- / Page-
CH-/I<<	I<< / Preset-
CH+/>>I	CH+ / Page+
CH+/>>I	>>I / Preset+
Vol-	Vol-
Mute	Mute / Dimmer
Menu	Menu / Home
Up	Up
Left	Left
Enter	OK
Right	Right
Setup/Search	Setup / OPT /
Down	Down
Return	Back / Return
Source Select/Top Menu	D.Menu / Top

