



Original	Replacement
DVD Power	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
Prog/Direct	TV/Radio /
7	7
8	8
9	9
Call	Text / Goto
0	0
+10	Guide / EPG / -/-
Clear	Exit / Cancel / Clear
Random	Blue / Prime Video / Random

Original	Replacement
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Repeat	Green / APP / Repeat
A-B Repeat	Yellow / YouTube / Repeat
Top Menu/PBC	D.Menu / Top
Menu	Menu / Home
Up	Up
Left	Left
Enter	OK
Right	Right
Angle	Info / Angle
Down	Down
Return	Back / Return
Display	Display / Media
Stop	Stop / Hold
Still/Pause	Pause / Step / Freeze
Play	Play / Slow





Original	Replacement	Original	Replacement
SLOW/SEARCH << Slow/Search	TUNE- << / Tune-		
/SEARCH >> Slow/Search	TUNE+ >> / Tune+		
SKIP << Skip	PRESET- << / Preset-		
SKIP >> Skip	PRESET+ >> / Preset+		
SETUP Setup	OPT-TOOLS Setup / OPT /		
NTSC/PAL NTSC/PAL	FORMAT Picture / Format		
ZOOM Zoom	SIZE Zoom / Size		
SLIDE SHOW Slide Show	LIST Smart / List		

