



| Original | Replacement | Original | Replacement |
|-----------|---------------|----------------------------|----------------------|
| Power AMP | Power | Info CD | Info |
| Power CD | Shift + Power | Vol+ | Vol + |
| 1 CD | 1 | Vol- | Vol - |
| 2 CD | 2 | Mute | Mute |
| 3 CD | 3 | Preset + CD | Ch + |
| 4 CD | 4 | Preset - CD | Ch - |
| 5 CD | 5 | Enter CD | Ok |
| 6 CD | 6 | Up CD | Up |
| 7 CD | 7 | Down CD | Down |
| 8 CD | 8 | Right CD | Right |
| 9 CD | 9 | Left CD | Left |
| 0 CD | 0 | Pure Direct CD | Options |
| +10 CD | Guide | Play/Pause CD | Play |
| Clear CD | Pre Ch | Stop CD | Stop |
| Source CD | AV | << CD button icon"/> << CD | << button icon"/> << |
| Menu CD | Menu | >> CD | >> |
| Mode CD | Dual | I<< CD | I<< |





| Original | Replacement |
|-------------------------|--------------|
| >>I CD | >>I |
| Repeat CD | Text |
| Program CD | Sleep |
| Random CD | Subt |
| Dimmer CD | Format |
| CD AMP | TV/R |
| Recorder AMP | Red |
| Network AMP | Exit |
| Phono | Smart |
| Tuner | Back |
| Internet Radio Preset 1 | List |
| Internet Radio Preset 2 | D. Menu |
| Internet Radio Preset 3 | 3D |
| Power NET | Media |
| Enter NET | Shift + Ok |
| Up NET | Shift + Up |
| Down NET | Shift + Down |

| Original | Replacement |
|-----------------|-----------------|
| Right NET | Shift + Right |
| Left NET | Shift + Left |
| Pure Direct NET | Shift + Options |
| 1 NET | Shift + 1 |
| 2 NET | Shift + 2 |
| 3 NET | Shift + 3 |
| 4 NET | Shift + 4 |
| 5 NET | Shift + 5 |
| 6 NET | Shift + 6 |
| 7 NET | Shift + 7 |
| 8 NET | Shift + 8 |
| 9 NET | Shift + 9 |
| +10 NET | Shift + Guide |
| 0 NET | Shift + 0 |
| Clear NET | Shift + Pre Ch |
| Mode NET | Shift + Dual |
| << NET | Shift + << |





| Original | Replacement |
|----------------|-------------------------|
| >> NET | SHIFT + Shift + >> |
| Info NET | SHIFT + Shift + Info |
| I<< NET | SHIFT + Shift + I<< |
| >>I NET | SHIFT + Shift + >>I |
| Stop NET | SHIFT + Shift + Stop |
| Play/Pause NET | SHIFT + Shift + Play |
| Preset + NET | SHIFT + Shift + Ch + |
| Preset - NET | SHIFT + Shift + Ch - |
| Menu NET | SHIFT + Shift + Menu |
| Source NET | SHIFT + Shift + AV |
| AUX | SHIFT + Shift + TV/R |
| Dimmer NET | SHIFT + Shift + Format |
| Random NET | SHIFT + Shift + Subt |
| Program NET | SHIFT + Shift + Sleep |
| Repeat NET | SHIFT + Shift + Text |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

