



Original	Replacement	Original	Replacement
	+ Shift + Power		>> / Tune+
	Power		2
	Red / Netflix / Search		1
	Green / APP / Repeat		4
	Yellow / YouTube / Repeat		<< / Tune-
	Blue / Prime Video / Random		8
	Eject / Surround		7
	Picture / Format		5
	Sound / Title		CH+ / Page+
	Subtitle / EQ		CH- / Page-
	Zoom / Size		Play / Slow
	Audio / Lang I/II		Pause / Step / Freeze
	Sleep / Timer		Stop / Hold
	TV/Radio /		Rec / Rec Mode
	9		+ Shift + Play /
	3		+ Shift + Stop /
	6		Vol+





Original	Replacement	Original	Replacement
I<< CD/MD/CDR-DVD/	+ Shift + I<< / Preset-		Text / Goto
>>I CD/MD/CDR-DVD/	+ Shift + >>I / Preset+		Smart / List
Vol- CD/MD/CDR-DVD/	Vol-		+ Shift + Mute / Dimmer
<< CD/MD/CDR-DVD/	+ Shift + << /		AV / Input / RDS
>> CD/MD/CDR-DVD/	+ Shift + >> /		Guide / EPG / -/-
Pause CD/MD/CDR-DVD/	+ Shift + Pause / Step /		0
	D.Menu / Top		Fav / Marker / PC
Muting	Mute / Dimmer		
	Setup / OPT /		
	Up		
	Info / Angle		
	Left		
CH.Select / Enter	OK		
	Right		
	Display / Media		
	Down		
Surround / Back / Return	Back / Return		

Original	Replacement	Original	Replacement
I<< CD/MD/CDR-DVD/	+ Shift + I<< / Preset-		Text / Goto
>>I CD/MD/CDR-DVD/	+ Shift + >>I / Preset+		Smart / List
Vol- CD/MD/CDR-DVD/	Vol-		+ Shift + Mute / Dimmer
<< CD/MD/CDR-DVD/	+ Shift + << /		AV / Input / RDS
>> CD/MD/CDR-DVD/	+ Shift + >> /		Guide / EPG / -/-
Pause CD/MD/CDR-DVD/	+ Shift + Pause / Step /		0
	D.Menu / Top		Fav / Marker / PC
Muting	Mute / Dimmer		
	Setup / OPT /		
	Up		
	Info / Angle		
	Left		
CH.Select / Enter	OK		
	Right		
	Display / Media		
	Down		
Surround / Back / Return	Back / Return		

