



Original	Replacement	Original	Replacement
Power Off	+ Shift + Power	Input DVD / VDP	2
Power On	Power	Input TV/ BDS	1
Power DVD/ VDP	+ Shift + 2	Input VCR- 1	4
Power VCR	+ Shift + 4	Tuning-	+ Shift + << /
Power TV	+ Shift + 1	Tv Vol -	+ Shift + Vol -
Mode	Red / Netflix / Search	Input V. AUX	8
Mode Cinema	Green / APP / Repeat	Input CDR / Tape	5
Mode Music	Yellow / YouTube / Repeat	Channel +	CH+ / Page+
Mode DSP SIM	Blue / Prime Video / Random	Tv CH+	+ Shift + CH+ /
Mode Direct	+ Shift + Red / Netflix /	Input AUX	7
Mode Stereo	+ Shift + Green / APP /	Channel -	CH- / Page-
Virtual Surround	+ Shift + Yellow / YouTube /	Tv CH-	+ Shift + CH- /
Mode 5CH/6CH	+ Shift + Blue / Prime	Mode	D. Menu / Top
Input CD	3	Memory	+ Shift + Smart / List
Input Tuner	6	Band	+ Shift + Display / Media
Tuning+	+ Shift + >> /	Shift	Info / Angle
Tv Vol +	+ Shift + Vol +	Play CD/ MD/ CDR- DVD/ VDP	Play / Slow





Original	Replacement	Original	Replacement
St op CD/ MD/ CDR- DVD/	St op / Hol d	Ri ght	Ri ght
Vol +	Vol +	Di spl ay	Di spl ay / Medi a
I << CD/ MD/ CDR- DVD/	I << / Preset -	On Screen	Smar t / Li st
>>I CD/ MD/ CDR- DVD/	>>I / Preset +	Down	Down
<< CD/ MD/ CDR- DVD/	<< / Tune-	Surround Back	Subtitle / EQ
>> CD/ MD/ CDR- DVD/	>> / Tune+	Ret ur n	Back / Ret ur n
Vol -	Vol -	Test Tone	Text / Goto
Pause CD/ MD/ CDR- DVD/	Pause / Step / Freeze	Vi deo Sel ect	Pi ctur e / For nat
Di sc Ski p+	TV/ Radi o /	Di mmer	Shift + Mute / Di mmer
Mut i ng	Mute / Di mmer	Speaker	Sound / Ti tle
Set up	Set up / OPT /	I nput Mòde	Gui de / EPG / - / -
Up	Up	I nput Anal og	0
Surround	Ej ect / Surround	I nput Ext - I n	Fav / Marker / PC
Menu	Menu / Home		
Lef t	Lef t		
CH Sel ect	AV / I nput / RDS		
Ent er	OK		

