



Original	Replacement
	Eject / Surround
	Sleep / Timer
	Exit / Cancel / Clear
	TV/Radio /
	Smart / List
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / -/--
	Fav / Marker / PC

Original	Replacement
	Play / Slow
	Vol+
	Pause / Step / Freeze
	Vol-
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	Green / APP / Repeat
	Yellow / YouTube / Repeat
<< Skip button icon"/>	<< / Tune- button icon"/> << / Tune-
	>> / Tune+

