



Original	Replacement
Play MD	Shift + Play /
< Play Tape	Left
Play > Tape	Right
Power	Power
Stop MD	Shift + Stop /
Stop Tape	OK
Preset Up	CH+ / Page+
Vol+	Vol+
I<< CD	I<< / Preset-
>>I CD	>>I / Preset+
Preset Down	CH- / Page-
Vol-	Vol-
Stop CD	Stop / Hold
Play CD	Play / Slow
D.Skip CD	Eject / Surround
Function	Smart / List
Tuner	Shift + 6

Original	Replacement
Direct	Menu / Home
CD <<	<< / Tune-
CD >>	>> / Tune+
1	1
2	2
3	3
Repeat CD	Green / APP / Repeat
Random CD	Blue / Prime Video / Random
4	4
5	5
6	6
Program CD	TV/Radio /
Cancel	Exit / Cancel / Clear
7	7
8	8
9	9
Edit CD	Subtitle / EQ





Original		Replacement	
	Time CD		Zoom / Size
	10		0
	+10		Guide / EPG / -/--
	Rec / Rec Mute		Rec / Rec Mode
	<< Tape		Down
	>> Tape		Up
	SDB		Sound / Title
	Sleep		Sleep / Timer
	I<< MD		Shift + I<< / Preset-
	>>I MD		Shift + >>I / Preset+
	Band		Display / Media
	Tuning-		Shift + << /
	Tuning+		Shift + >> /
	Memo		Fav / Marker / PC
	RDS		AV / Input / RDS
	PTY		Text / Goto
	TUNER CT		Picture / Format

Original		Replacement	
	TUNER Panel		D.Menu / Top
	TUNER EON		Setup / OPT /

