 
 
 
 
 
 




Original	Replacement	Original	Replacement
 Power On	 Power	 Tuning-	 Shift + <<
 TV/VCR	 AV	 Tv Vol -	 Shift + Vol -
 Power	 Shift + 3	 Channel +	 Ch +
 Power Off	 Shift + Power	 Tv CH+	 Shift + Ch +
 Power DVD/VDP	 Shift + 4	 Channel -	 Ch -
 Power VCR	 Shift + 6	 Tv CH-	 Shift + Ch -
 Power TV	 TV/R	 Input Phono	 1
 Mode	 Red	 Input CD	 2
 Mode Cinema	 Green	 Input Tuner	 3
 Mode Music	 Yellow	 Input DVD / VDP	 4
 Mode DSP SIM	 Blue	 Input TV/DBS	 5
 Mode Direct	 Shift + Red	 Input VCR-1	 6
 Mode Stereo	 Shift + Green	 Input VCR-2	 7
 Virtual Surround	 Shift + Yellow	 Input V.AUX	 8
 Mode 5CH/6CH	 Shift + Blue	 Input CDR / Tape	 9
 Tuning+	 Shift + >>	 Mode	 Options
 Tv Vol +	 Shift + Vol +	 Memory	 Smart





Original	Replacement
 Band	 Media
 Shift	 3D
 Play CD/ MD/ CDR- DVD/	 Play
 Stop CD/ MD/ CDR- DVD/	 Stop
 1 << CD/ MD/ CDR- DVD/	 1 <<
 >>1 CD/ MD/ CDR- DVD/	 >>1
 << CD/ MD/ CDR- DVD/	 <<
 >> CD/ MD/ CDR- DVD/	 >>
 A/B Pause CD/ MD/ CDR- DVD/	 Pause
 Disc Skip+	 List
 Vol +	 Vol +
 Vol -	 Vol -
 Muting	 Mute
 Setup	 D. Menu
 Surround	 Subt
 Menu	 Menu
 Up	 Up

Original	Replacement
 Left t	 Lef t
 CH Sel ect	 +  Shi ft + Ok
 Ent er	 Ok
 Ri ght	 Ri ght
 Down	 Down
 Di spl ay	 I nf o
 On Screen	 +  Shi ft + I nf o
 Surround Back	 Back
 Ret ur n	 +  Shi ft + Back
 Test Tone	 Text
 Vi deo Sel ect	 For mat
 Di mmer	 Sl eep
 Speaker	 Dual
 I nput M bde	 Gui de
 I nput Anal og	 0
 I nput Ext -I n	 Pre Ch

