



| Original           | Replacement               | Original       | Replacement                   |
|--------------------|---------------------------|----------------|-------------------------------|
| Power              | Power                     | Quick Select 2 | Audio / Lang I/II             |
| CBL/ SAT           | Shift + 0                 | Quick Select 3 | Subtitle / EQ                 |
| DVD                | Shift + 2                 | Quick Select 4 | Eject / Surround              |
| TV Audi o          | Shift + 1                 | CH/ Page Up    | CH+ / Page+                   |
| Bl u- ray          | Shift + 4                 | Eco            | Text / Got o                  |
| AUX1               | Shift + 7                 | Vol ume+       | Vol +                         |
| Tuner              | Shift + 6                 | CH/ Page Down  | CH- / Page-                   |
| Bl uet oot h       | Shift + 9                 | Mute           | Mute / Di mmer                |
| Game               | Shift + 5                 | Vol ume-       | Vol -                         |
| AUX2               | Shift + Guide / EPG / -/- | I nf o         | I nf o / Angl e               |
| Phono              | Fav / Marker / PC         | Up             | Up                            |
| i Pod/ USB         | Shift + 8                 | Opt i on       | Shift + Set up / OPT / Tool s |
| Medi a Pl ayer     | Di spl ay / Medi a        | Lef t          | Lef t                         |
| CD                 | Shift + 3                 | Ent er         | OK                            |
| Onl i ne Musi c    | Smart / Li st             | Ri ght         | Ri ght                        |
| I nt er net Radi o | Gui de / EPG / -/-        | Back           | Back / Ret ur n               |
| Qui ck Sel ect 1   | Sound / Ti tle            | Down           | Down                          |





| Original      | Replacement                    |
|---------------|--------------------------------|
| Set up        | Set up / OPT /                 |
| I <</ Tune-   | I << / Preset-                 |
| I <</ Tune-   | +  Shift + << /                |
| Pl ay         | Pl ay / Sl ow                  |
| >> / Tune+    | >> / Preset+                   |
| >> / Tune+    | +  Shift + >> /                |
| <<            | << / Tune-                     |
| Pause         | Pause / Step / Freeze          |
| St op         | St op / Hol d                  |
| >>            | >> / Tune+                     |
| Green/ Movi e | Green / APP / Repeat           |
| Red/ Musi c   | Red / Netflix / Search         |
| Bl ue/ Game   | Bl ue / Pri ne Vi deo / Random |
| Yel low Pure  | Yel low / YouTube / Repeat     |
| 1             | 1                              |
| 2             | 2                              |
| 3             | 3                              |

| Original | Replacement     |
|----------|-----------------|
| Sl eep   | Sl eep / Ti mer |
| 4        | 4               |
| 5        | 5               |
| 6        | 6               |
| 7        | 7               |
| 8        | 8               |
| 9        | 9               |
| 0        | 0               |
|          |                 |
|          |                 |
|          |                 |
|          |                 |
|          |                 |
|          |                 |
|          |                 |
|          |                 |
|          |                 |
|          |                 |





| Original                                                                                               | Replacement                                                                                                    |
|--------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
|  Power                |  Power                        |
|  CBL/ SAT             |  Shift + 0                    |
|  DVD                  |  Shift + 2                    |
|  TV Audi o            |  Shift + 1                    |
|  Bl u- ray            |  Shift + 4                    |
|  AUX1                 |  Shift + 7                    |
|  Tuner                |  Shift + 6                    |
|  Bl uet oot h         |  Shift + 9                    |
|  Game                 |  Shift + 5                    |
|  AUX2                |  Shift + Guide / EPG / - / - |
|  Phono              |  Fav / Marker / PC          |
|  i Pod/ USB         |  Shift + 8                  |
|  Medi a Pl ayer     |  Di spl ay / Medi a         |
|  CD                 |  Shift + 3                  |
|  Onl i ne Musi c    |  Smart / Li st              |
|  I nt er net Radi c |  Gui de / EPG / - / -       |
|  Qui ck Sel ect 1   |  Sound / Ti tle             |

| Original                                                                                             | Replacement                                                                                               |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Qui ck Sel ect 2 |  Audi o / Lang I / I I |
|  Qui ck Sel ect 3 |  Subt it le / EQ       |
|  Qui ck Sel ect 4 |  Ej ect / Sur round    |
|  CH/ Page Up      |  CH+ / Page+           |
|  Vol ume+         |  Vol +                 |
|  CH/ Page Down    |  CH- / Page-           |
|  Mut e            |  Mut e / Di mmer       |
|  Vol ume-         |  Vol -                 |
|  Up               |  Up                    |
|  Lef t           |  Lef t                |
|  Ent er         |  OK                  |
|  Ri ght         |  Ri ght              |
|  Back           |  Back / Ret ur n     |
|  Down           |  Down                |
|  I <</ Tune-    |  Shift + << /        |
|  I <</ Tune-    |  I << / Preset-      |
|  Pl ay          |  Pl ay / Sl ow       |







| Original                                                                                               | Replacement                                                                                                     | Original                                                                                             | Replacement                                                                                              |
|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|  Power                |  Power                         |  Qui ck Sel ect 2 |  Audi o / Lang I / II |
|  CBL/ SAT             |  Shift + 0                     |  Qui ck Sel ect 3 |  Subt it le / EQ      |
|  DVD                  |  Shift + 2                     |  Qui ck Sel ect 4 |  Ej ect / Sur round   |
|  TV Audi o            |  Shift + 1                     |  CH/ Page Up      |  CH+ / Page+          |
|  Bl u- ray            |  Shift + 4                     |  Vol ume+         |  Vol +                |
|  AUX1                 |  Shift + 7                     |  CH/ Page Down    |  CH- / Page-          |
|  Tuner                |  Shift + 6                     |  Mut e            |  Mut e / Di mmer      |
|  Bl uet oot h         |  Shift + 9                     |  Vol ume-         |  Vol -                |
|  Game                 |  Shift + 5                     |  Up               |  Up                   |
|  AUX2                |  Shift + Gui de / EPG / - / - |  Lef t           |  Lef t               |
|  Phono              |  Fav / Marker / PC           |  Ent er         |  OK                 |
|  i Pod/ USB         |  Shift + 8                   |  Ri ght         |  Ri ght             |
|  Medi a Pl ayer     |  Di spl ay / Medi a          |  Back           |  Back / Ret urn     |
|  CD                 |  Shift + 3                   |  Down           |  Down               |
|  On l i ne Musi c   |  Smart / Li st               |  I <</ Tune-    |  Shift + << /       |
|  I nt er net Radi o |  Gui de / EPG / - / -        |  I <</ Tune-    |  I << / Preset-     |
|  Qui ck Sel ect 1   |  Sound / Ti tle              |  Pl ay          |  Pl ay / Sl ow      |



