 
 
 
 




Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + 5
 AUX2	 Shift + Guide / EPG / -/--
 Phono	 Fav / Marker / PC
 iPod/USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Guide / EPG / -/--
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Audio / Lang I/II
 Quick Select 3	 Subtitle / EQ
 Quick Select 4	 Eject / Surround
 CH/Page Up	 CH+ / Page+
 Eco	 Text / Goto
 Volume+	 Vol+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Info	 Info / Angle
 Up	 Up
 Option	 Shift + Setup / OPT / Tools
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down



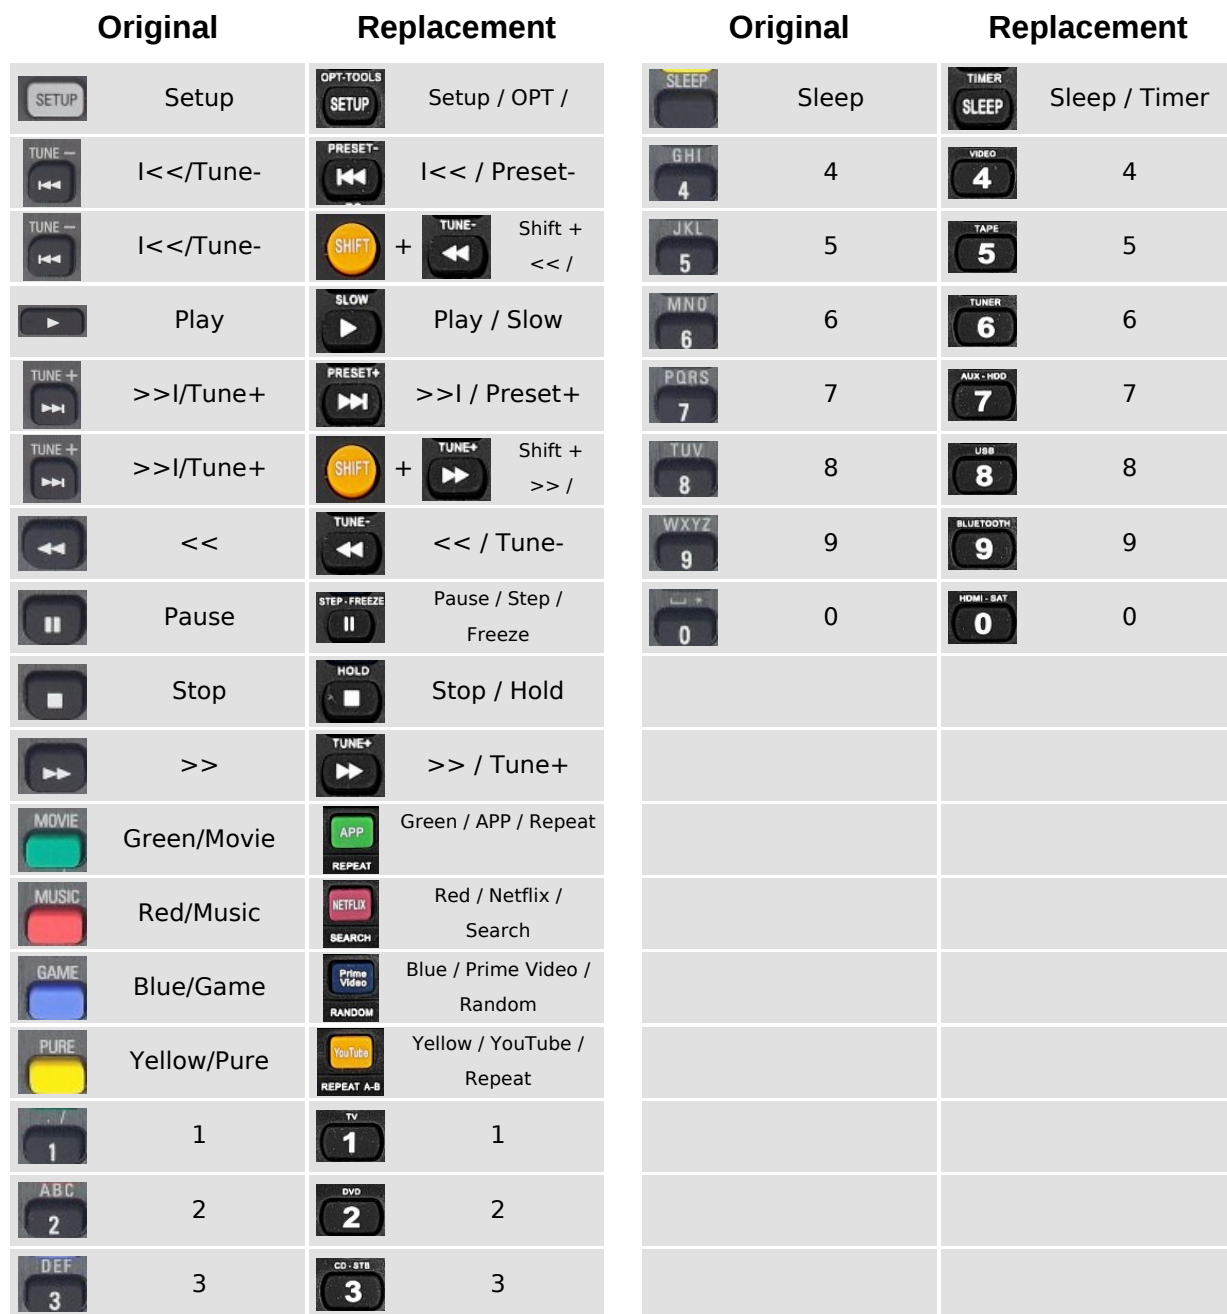 




 
 
 
Original	Replacement
 Power	 Power
 CBL/SAT	 +  Shift + 0
 DVD	 +  Shift + 2
 TV Audio	 +  Shift + 1
 Blu-ray	 +  Shift + 4
 AUX1	 +  Shift + 7
 Tuner	 +  Shift + 6
 Bluetooth	 +  Shift + 9
 Game	 +  Shift + 5
 AUX2	 +  Shift + Guide / EPG / -/--
 Phono	 Fav / Marker / PC
 iPod/USB	 +  Shift + 8
 Media Player	 Display / Media
 CD	 +  Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Guide / EPG / -/--
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Audio / Lang I/II
 Quick Select 3	 Subtitle / EQ
 Quick Select 4	 Eject / Surround
 CH/Page Up	 CH+ / Page+
 Volume+	 Vol+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 +  Shift + << /
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow



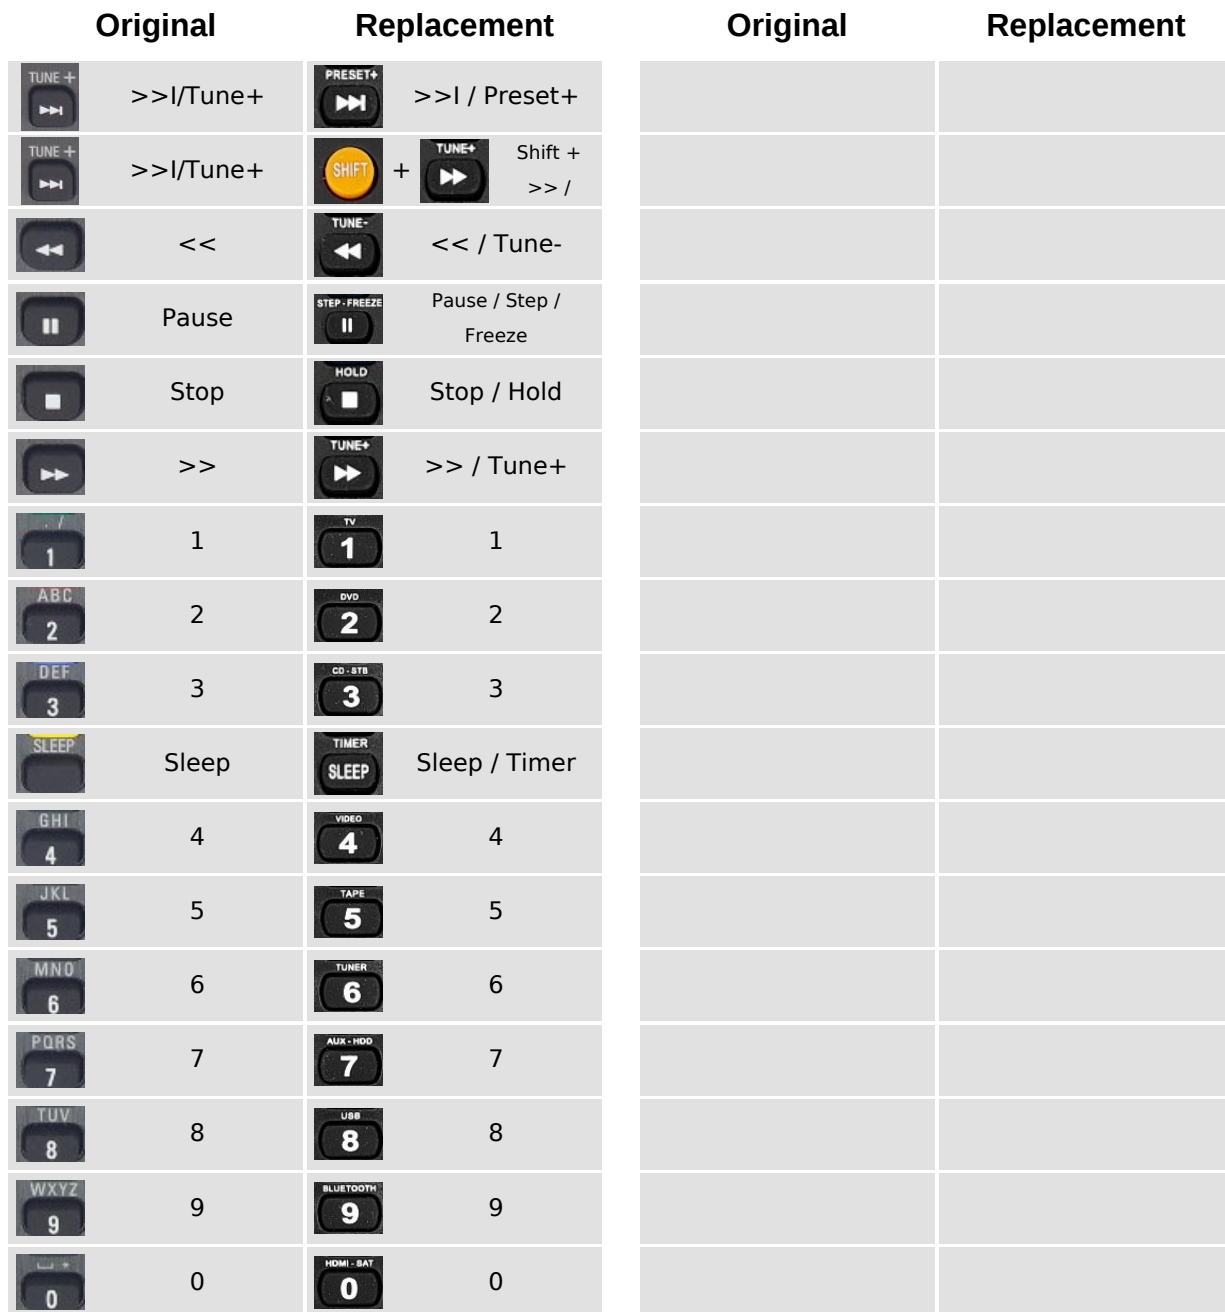



Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 4
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + 5
 AUX2	 Shift + Guide / EPG / -/--
 Phono	 Fav / Marker / PC
 iPod/USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Guide / EPG / -/--
 Quick Select 1	 Sound / Title

Original	Replacement
 Quick Select 2	 Audio / Lang I/II
 Quick Select 3	 Subtitle / EQ
 Quick Select 4	 Eject / Surround
 CH/Page Up	 CH+ / Page+
 Volume+	 Vol+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow



