

 

 



 
 
 







 
 
 






 





 












Original	Replacement
Power	Power
Power AMP	Shift + Power
CD	Red
Recorder	Green
Network	Yellow
Phono	Blue
AUX	Smart
Tuner	Media
Internet Radio Preset 1	Shift + 1
Internet Radio Preset 2	Shift + 2
Internet Radio Preset 3	Shift + 3
Play	Play
Pause	Pause
I<<	I<<
>>I	>>I
Stop	Stop
<<	<<

Original	Replacement
>>	>>
Preset+	Ch +
Preset-	Ch -
Pure Direct/Favorite	Pre Ch
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Info	Info
Mode	Format
Source	AV
Menu	Menu
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
1	1





Original		Replacement		Original		Replacement	
	Power		Power		Pure Direct/Favorite		Pre Ch
	Power AMP		Shift + Power		Vol+		Vol +
	CD		Red		Vol-		Vol -
	Recorder		Green		Mute		Mute
	Network		Yellow		Info		Info
	Phono		Blue		Mode		Format
	AUX		Smart		Source		AV
	Tuner		Media		Menu		Menu
	Play		Play		Up		Up
	Pause		Pause		Down		Down
	I<<		I<<		Right		Right
	>>I		>>I		Left		Left
	Stop		Stop		Enter		Ok
	<<		<<		1		1
	>>		>>		2		2
	Preset+		Ch +		3		3
	Preset-		Ch -		4		4



