



Original	Replacement
	Sleep / Timer
	Shift + Power
	Power
	Shift + 1
	Shift + 6
	Shift + 8
	Shift + 7
	1
	2
	3
	Shift + Blue / Prime
	4
	5
	6
	Shift + Green / APP /
	7
	8

Original	Replacement
	9
	Shift + Yellow / YouTube /
	0
	Shift + Red / Netflix /
	Exit / Cancel / Clear
	CH+ / Page+
	Mute / Dimmer
	Vol+
	CH- / Page-
	Setup / OPT /
	Vol-
	Shift + D.Menu / Top Menu
	Up
	D.Menu / Top
	Left
	OK
	Right





Original	Replacement
Home	Menu / Home
Down	Down
Return	Back / Return
<</Tuning-	<< / Tune-
Play	Play / Slow
>>/Tuning+	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
RDS/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Pic In Pic	Picture / Format
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat

Original	Replacement
Blue	Blue / Prime Video / Random
S.Direct	TV/Radio /
SDB Tone	Fav / Marker / PC
Dolby	Guide / EPG / -/-
Stereo	Sound / Title
Display	Display / Media
Dimmer	Shift + Mute / Dimmer
Clock	Shift + Sleep / Timer
Power Tv	Shift + OK
Input Tv	AV / Input / RDS
Remote/Browse	Smart / List
Play/Pause	Shift + Play /

