



| Original | Replacement       |
|----------|-------------------|
|          | Smart / List      |
|          | Display / Media   |
|          | Shift + Power     |
|          | Power             |
|          | 1                 |
|          | 2                 |
|          | 3                 |
|          | 4                 |
|          | 5                 |
|          | 6                 |
|          | 7                 |
|          | 8                 |
|          | 9                 |
|          | 0                 |
|          | Guide / EPG / -/- |
|          | Eject / Surround  |
|          | Play / Slow       |

| Original | Replacement           |
|----------|-----------------------|
|          | Pause / Step / Freeze |
|          | Stop / Hold           |
|          | Shift + 3             |
|          | I<< / Preset-         |
|          | >>I / Preset+         |
|          | Shift + 2             |
|          | Shift + 6             |
|          | Shift + 5             |
|          | Shift + 4             |
|          | Shift + 7             |
|          | Shift + 9             |
|          | Shift + >>I / Preset+ |
|          | CH+ / Page+           |
|          | Vol+                  |
|          | Mute / Dimmer         |
|          | Shift + I<< / Preset- |
|          | CH- / Page-           |





| Original | Replacement | Original | Replacement      |
|----------|-------------|----------|------------------|
|          | Vol-        |          | Vol-             |
|          | Shift/PTY   |          | D.Menu / Top     |
|          | Menu        |          | Menu / Home      |
|          | Up          |          | Up               |
|          | RDS         |          | AV / Input / RDS |
|          | Left        |          | Left             |
|          | Enter       |          | OK               |
|          | Right       |          | Right            |
|          | Band        |          | Setup / OPT /    |
|          | Status      |          | Info / Angle     |
|          | Down        |          | Down             |
|          | iPod        | +        | Shift + 8        |
|          |             |          |                  |
|          |             |          |                  |
|          |             |          |                  |
|          |             |          |                  |
|          |             |          |                  |
|          |             |          |                  |
|          |             |          |                  |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

