



Original	Replacement
	Sleep
	Power
	AV / Input / RDS
	Shift + 3
	Shift + 8
	Smart / List
	Sound / Title
	Shift + I<< / Preset-
	Shift + >>I / Preset+
	Shift + Stop /
	Shift + Play /
	TV/Radio /
	Blue / Prime Video / Random
	Green / APP / Repeat
	Shift + 5
	Shift + 2
	Play / Slow

Original	Replacement
	Pause / Step / Freeze
	Audio / Lang I/II
	Zoom / Size
	D.Menu / Top
	CH- / Page-
	CH+ / Page+
	Fav / Marker / PC
	Shift + Up
	Shift + Sleep / Timer
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	Text / Goto
	Shift + Left
	Shift + OK
	Shift + Right
	Shift + Mute / Dimmer





Original	Replacement
 Back	 Shift + Back / Return
 Down	 Shift + Down
 Edit	 Yellow / YouTube / Repeat
 <</Tune-	 << / Tune-
 >>/TU+	 >> / Tune+
 Vol+	 Vol+
 1	 1
 2	 2
 3	 3
 CD Store	 Picture / Format
 4	 4
 5	 5
 6	 6
 Play/Pause iPod	 Rec / Rec Mode
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 7	 7

Original	Replacement
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 Call	 Info / Angle
 0/10	 0
 +10	 Guide / EPG / -/--
 Setup	 Setup / OPT /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Time/Display	 Display / Media
 Back	 Back / Return
 Down	 Down
 Music Search	 Red / Netflix / Search

