



Original	Replacement	Original	Replacement
	Power		Power
	I nput CBL/ SAT	+	Shi ft + 0
	I nput DVD	+	Shi ft + 2
	I nput TV Audi c	+	Shi ft + 1
	I nput Bl u- ray	+	Shi ft + 4
	I nput Aux1	+	Shi ft + 7
	I nput Tuner	+	Shi ft + 6
	I nput Bl uet oot	+	Shi ft + 9
	I nput Game		Gui de / EPG / - / -
	I nput Aux2	+	Shi ft + Gui de / EPG / - / -
	I nput Phono	+	Shi ft + Fav / Marker / PC
	I nput USB	+	Shi ft + 8
	I nput Medi a		Di spl ay / Medi a
	I nput CD	+	Shi ft + 3
	I nput HEOS		Smart / Li st
	I nput I nter net Radi o	+	Shi ft + 5
	Qui ck Sel ect 1	+	Shi ft + Red / Netfl i x / Search
	Qui ck Sel ect 2	+	Shi ft + Green / APP /
	Qui ck Sel ect 3	+	Shi ft + Yel l ow / YouTube /
	Qui ck Sel ect 4	+	Shi ft + Bl ue / Pri me
	CH + / Page +		CH+ / Page+
	Eco		D. Menu / Top
	Vol ume +		Vol +
	CH - / Page -		CH- / Page-
	Mute		Mute / Di mmer
	Vol ume -		Vol -
	I nf o		I nf o / Angl e
	Up		Up
	Opt i on	+	Shi ft + Set up / OPT / Tool s
	Lef t		Lef t
	Ri ght		Ri ght
	Back		Back / Ret ur n
	Down		Down
	Set up		Set up / OPT /

Tool s








Original	Replacement
Power	Power
Input CBL/SAT	Shift + 0
Input DVD	Shift + 2
Input TV Audio	Shift + 1
Input Blu-ray	Shift + 4
Input Aux1	Shift + 7
Input Tuner	Shift + 6
Input Bluetooth	Shift + 9
Input Game	Guide / EPG / -/-
Input Aux2	Shift + Guide / EPG / -/-
Input Phono	Shift + Fav / Marker / PC
Input USB	Shift + 8
Input Media	Display / Media
Input CD	Shift + 3
Input HEOS	Smart / List
Input Internet Radio	Shift + 5
Quick Select 1	Red / Netflix / Search

Original	Replacement
Quick Select 2	Green / APP / Repeat
Quick Select 3	Yellow / YouTube / Repeat
Quick Select 4	Blue / Prime Video / Random
CH + / Page +	CH+ / Page+
Volume +	Vol +
CH - / Page -	CH- / Page-
Mute	Mute / Dimmer
Volume -	Vol -
Up	Up
Left	Left
Right	Right
Back	Back / Return
Down	Down
I << / Tune -	I << / Preset -
I << / Tune -	Shift + << /
Play	Play / Slow
>> / Tune +	>> / Preset +



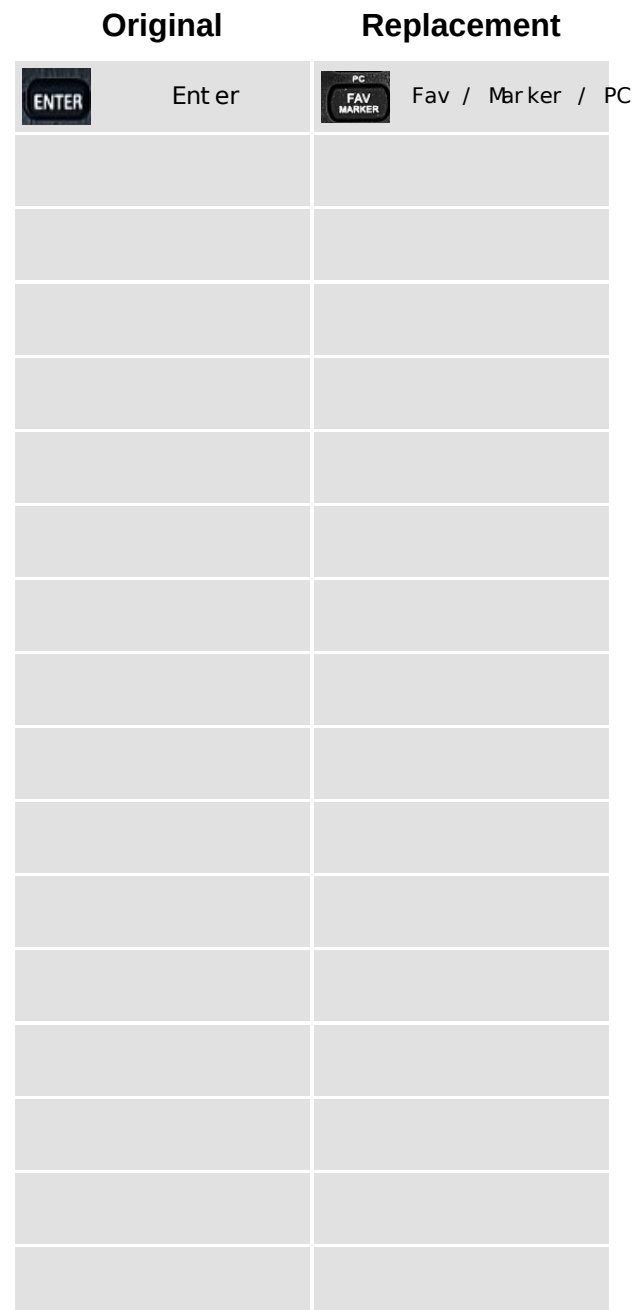



Original	Replacement	Original	Replacement
Enter	OK	Mute	Mute / Dimmer
>> / Tune +	>> / Preset +	Volume +	Vol +
Quick Select 1	Red / Netflix / Search	Volume -	Vol -
Quick Select 4	Blue / Prime Video / Random	Up	Up
Power	Power	Input CD	Shift + 3
Quick Select 3	Yellow / YouTube / Repeat	Input Media	Display / Media
CH + / Page +	CH+ / Page+	Input CBL/SAT	Shift + 0
Quick Select 2	Green / APP / Repeat	Down	Down
Input TV Audio	Shift + 1	Input DVD	Shift + 2
Input Tuner	Shift + 6	Input Aux1	Shift + 7
Input Bluetooth	Shift + 9	Input Game	Guide / EPG / -/-
Input USB	Shift + 8	Right	Right
Input HEOS	Smart / List	Input Aux2	Shift + Guide / EPG / -/-
Input Internet Radio	Shift + 5	Back	Back / Return
CH - / Page -	CH / Page-	I << / Tune -	Shift + << /
Input Phono	Shift + Favourite / Marker / PC	Left	Left
Input Blu-ray	Shift + 4	I << / Tune -	I << / Preset -



