



Original	Replacement	Original	Replacement
Power	Power	Quick Select 2	Text
Input TV Audio	1	Quick Select 3	Eject
Input Tuner	2	Quick Select 4	AV
Input Bluetooth	3	CH + / Page +	Ch +
Input Phono	4	CH - / Page -	Ch -
Input USB	5	Eco	3D
Input HEOS	6	Mute	Mute
Input Internet Radio	7	Volume +	Vol +
Input CBL/SAT	8	Volume -	Vol -
Input DVD	9	Info	Info
Input Blu-ray	Guide	Option	Options
Input Aux1	0	Setup	Menu
Input Game	Pre Ch	Back	Back
Input Aux2	Shift + Smart	Back	Exit
Input Media	Media	Up	Up
Input CD	Smart	Down	Down
Quick Select 1	D. Menu	Right	Right




 



 






 






 


 








Original	Replacement
	Left
	Ok
	I<< / Tune -
	Play
	>>I / Tune +
	<<
	Pause
	Stop
	>>
	Green / Sound Mode Movie
	Red / Sound Mode Music
	Blue / Sound Mode Game
	Yellow / Sound Mode Pure
	Shift + 1
	Shift + 2
	Shift + 3
	Shift + 4

Original	Replacement
	Shift + 5
	Shift + 6
	Shift + 7
	Shift + 8
	Shift + 9
	Shift + 0
	Shift + Pre Ch
	Sleep





Original	Replacement	Original	Replacement
 Power	 Power	 Quick Select 2	 Text
 Input TV Audio	 1	 Quick Select 3	 Eject
 Input Tuner	 2	 Quick Select 4	 AV
 Input Bluetooth	 3	 CH + / Page +	 Ch +
 Input Phono	 4	 CH - / Page -	 Ch -
 Input USB	 5	 Mute	 Mute
 Input HEOS	 6	 Volume +	 Vol +
 Input Internet Radio	 7	 Volume -	 Vol -
 Input CBL/SAT	 8	 Up	 Up
 Input DVD	 9	 Down	 Down
 Input Blu-ray	 Guide	 Right	 Right
 Input Aux1	 0	 Left	 Left
 Input Game	 Pre Ch	 Enter	 Ok
 Input Aux2	 Shift + Smart	 Back	 Back
 Input Media	 Media	 Back	 Exit
 Input CD	 Smart	 I<< / Tune -	 I<<
 Quick Select 1	 D. Menu	 Play	 Play





Original	Replacement
Quick Select 1	D. Menu
Enter	+ Shift + Pre Ch
Quick Select 4	AV
Quick Select 3	Eject
Quick Select 2	Text
Power	Power
Input TV Audio	1
Input Tuner	2
Input Bluetooth	3
Input Phono	4
Input USB	5
Input HEOS	6
Input Internet Radio	7
Input CBL/SAT	8
Input DVD	9
Input Blu-ray	Guide
Input Aux1	0

Original	Replacement
Input Game	Pre Ch
Input Aux2	+ Shift + Smart
Input Media	Media
Input CD	Smart
CH + / Page +	Ch +
CH - / Page -	Ch -
Mute	Mute
Volume +	Vol +
Volume -	Vol -
Up	Up
Down	Down
Right	Right
Back	Exit
Left	Left
Enter	Ok
Back	Back
I<< / Tune -	I<<



