



Original	Replacement
	Power
	Clock
	Sleep
	CD
	Analog In
	Optical In
	FM
	AM
	Bluetooth
	I<<
	Play
	Pause
	>>I
	<</Tune-
	Stop
	>>/Tune+
	Preset+
	Power
	Shift + Sleep / Timer
	Sleep / Timer
	Shift + 3
	D.Menu / Top
	Setup / OPT /
	Smart / List
	Display / Media
	Shift + 9
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	>>I / Preset+
	<< / Tune-
	Stop / Hold
	>> / Tune+
	Shift + >>I / Preset+

Original	Replacement
	Tone
	Volume+
	Preset-
	Mute
	Volume-
	Dimmer
	Info
	Up
	Left
	Enter
	Right
	Back
	Down
	Timer Menu
	Shuffle
	Repeat
	Program
	AV / Input / RDS
	Vol+
	Shift + I<< / Preset-
	Mute / Dimmer
	Vol-
	Shift + Mute / Dimmer
	Info / Angle
	Up
	Left
	OK
	Right
	Back / Return
	Down
	Menu / Home
	Blue / Prime Video / Random
	Green / APP / Repeat
	TV/Radio /





Original	Replacement
MODE	FORMAT Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	GUIDE Guide / EPG / -/--
0	0
CLEAR	CLEAR Exit / Cancel / Clear

Original	Replacement

