



Original	Replacement
Power	Power
CBL/SAT	Shift + 1
DVD	Shift + 2
Tv Audio	Shift + 9
Blu-ray	Shift + 3
AUX1	Shift + 4
Tuner	Guide
Bluetooth	Shift + Pre Ch
Game	Shift + 6
AUX2	Shift + 5
Phono	Shift + 0
Media Player	Shift + 8
CD	Shift + 7
Internet Radio	Shift + Guide
Quick Select 1	D. Menu
Quick Select 2	Text

Original	Replacement
Quick Select 3	Eject
Quick Select 4	AV
CH/Page+	Ch +
CH/Page-	Ch -
Vol+	Vol +
Vol-	Vol -
Eco	3D
Mute	Mute
Info	Info
Option	Options
Back	Back
Setup	Menu
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok




 


Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Tv Audio	 Shift + 9
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 Tuner	 Guide
 Bluetooth	 Shift + Pre Ch
 Game	 Shift + 6
 AUX2	 Shift + 5
 Phono	 Shift + 0
 Media Player	 Shift + 8
 CD	 Shift + 7
 Internet Radio	 Shift + Guide
 Quick Select 1	 D. Menu
 Quick Select 2	 Text

Original	Replacement
 Quick Select 3	 Eject
 Quick Select 4	 AV
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 I<</Tune-	 I<<
 Play	 Play
 >>I/Tune+	 >>I
 >>>	 >>>
 <<<	 <<<





Original	Replacement
 Power	 Power
 CBL/SAT	 Shift + 1
 DVD	 Shift + 2
 Tv Audio	 Shift + 9
 Blu-ray	 Shift + 3
 AUX1	 Shift + 4
 Tuner	 Guide
 Bluetooth	 Shift + Pre Ch
 Game	 Shift + 6
 AUX2	 Shift + 5
 Phono	 Shift + 0
 Media Player	 Shift + 8
 CD	 Shift + 7
 Internet Radio	 Shift + Guide
 Quick Select 1	 D. Menu
 Quick Select 2	 Text

Original	Replacement
 Quick Select 3	 Eject
 Quick Select 4	 AV
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Back	 Back
 I<</Tune-	 I<<
 Play	 Play
 >>I/Tune+	 >>I
 >>>	 >>>
 <<<	 <<<



