



A black Mandis TV remote control with various buttons. At the top are a red power button, a black MUTE button, and an orange SHIFT button. Below these are four blue buttons: TV, DVD, SAT, and AUX. The next row contains PLAY MODE (play), REC MODE (stop), and two other buttons. The following rows include buttons for DISC NAV, SOUND, AD, SETTINGS, LIST, DUAL, SUBT, OPT, PROG, SEARCH, PICTURE, ECO, SLEEP, TV/R, FORMAT, 3D, E-MANUAL, REPEAT, ZOOM, TIMER, D-MENU, TEXT, and AV. A central navigation pad has a blue OK button surrounded by four blue directional buttons. Below this are CLEAR, EXIT, RETURN, and BACK buttons. Further down are HOME, SMART, APP, MEDIA, and buttons for volume (+/-) and channel (+/-). A numeric keypad (0-9) is present, with FAV and PRE-CH labels. At the bottom are GUIDE, 0, and PRE-CH buttons, followed by four colored buttons: A (red), B (green), C (orange), and D (blue). The Mandis shop logo and website URL are at the very bottom.

