 

 




 
 

 


 
 







 



 


 


 

 
 
 
 
Original	Replacement
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Shift + 3
 Recorder	 Shift + 8
 Network	 Shift + 6
 Optical 1	 Shift + 1
 Optical 2	 Shift + 2
 Coaxial	 Shift + 4
 Phono	 Shift + 5
 AUX	 Shift + 7
 Bluetooth	 Shift + 9
 I<<	 I<< / Preset-
 Play / Pause	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+

Original	Replacement
 Info	 Info / Angle
 Pure Direct / Favorites	 Fav / Marker / PC
 Pure Direct / Favorites	 Sound / Title
 Volume+	 Vol+
 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Queue	 Smart / List
 Mode / Option	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 1	 1





Original	Replacement
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Shift + 3
 Recorder	 Shift + 8
 Network	 Shift + 6
 Optical 1	 Shift + 1
 Optical 2	 Shift + 2
 Coaxial	 Shift + 4
 Phono	 Shift + 5
 AUX	 Shift + 7
 Bluetooth	 Shift + 9
 I<<	 I<< / Preset-
 Play / Pause	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+

Original	Replacement
 Info	 Info / Angle
 Pure Direct / Favorites	 Fav / Marker / PC
 Pure Direct / Favorites	 Sound / Title
 Volume+	 Vol+
 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Mode / Option	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 1	 1
 2	 2



