


Original	Replacement
CD Power	Power
AMP Power	Shift + Power
Dimmer	Shift + Mute / Dimmer
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down	Down
AMP Setup	Menu / Home
Input Select Up	CH+ / Page+
Bluetooth	Shift + 9
Vol+	Vol+
Input Select Down	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-

Original	Replacement
I<<	I<< / Preset-
Play/Pause	Play / Slow
>>I	>>I / Preset+
Shuffle	Blue / Prime Video / Random
Stop	Stop / Hold
Repeat	Green / APP / Repeat
Program	TV/Radio /
Mode	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

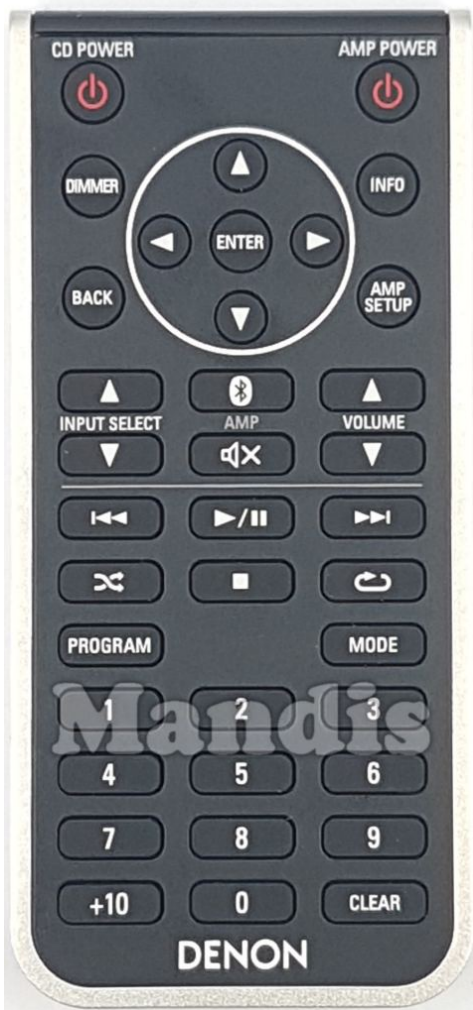



Original	Replacement	Original	Replacement
+10	+10		Guide / EPG / -/--
0	0		0
CLEAR	Clear		Exit / Cancel / Clear

Original	Replacement

