



Original	Replacement
Amplifier Power	Power
CD Power	+ Shift + Power
Disc Layer	Smart / List
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/--
Clear	Exit / Cancel / Clear
Mode Select	Picture / Format

Original	Replacement
Title/Artist	Sound / Title
Play/Select	Setup / OPT /
Time	Sleep / Timer
Repeat	Green / APP / Repeat
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Call	Fav / Marker / PC
I<<	I<< / Preset-
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
Volume+	Vol+
Volume-	Vol-
Muting	Mute / Dimmer
Dimmer	+ Shift + Mute / Dimmer
Input Select Up	CH+ / Page+



