



Original	Replacement
Sleep	Sleep / Timer
Clock	Shift + Sleep / Timer
Dimmer	Shift + Mute / Dimmer
Power	Power
Internet Radio	TV/Radio /
USB	Shift + 8
Music Server	Sound / Title
Tuner	Shift + 6
Analog In	D.Menu / Top
Optical In	Picture / Format
Bluetooth	Shift + 9
CD	Shift + 3
I<</CH-	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I/CH+	>>I / Preset+
<</Tune-	<< / Tune-

Original	Replacement
Stop	Stop / Hold
>>/Tune+	>> / Tune+
ADD Favorites	CH+ / Page+
SDB Tone	Smart / List
Volume+	Vol+
Call Favorites	CH- / Page-
Mute	Mute / Dimmer
Volume-	Vol-
Queue	Display / Media
Option	Shift + Setup / OPT / Tools
Up	Up
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /





Original		Replacement	
1 .@ /	1	TV 1	1
2 ABC	2	DVD 2	2
3 DEF	3	CD - STB 3	3
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
6 MNO	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
+10 w/A	+10	GUIDE EPG	Guide / EPG / -/--
0 .*	0	HDMI - BAT 0	0
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
PROGRAM MODE	Mode/Program	GOTO TEXT	Text / Goto
INFO	Info	ANGLE INFO	Info / Angle

Original		Replacement	

