



Original	Replacement		
	CD Power	+	Shift + Power
	AMP Power		Power
	CD	+	Shift + 3
	Recorder	+	Shift + 1
	Network	+	Shift + 2
	AUX	+	Shift + 7
	Coaxial	+	Shift + 4
	Optical	+	Shift + 5
	Phono	+	Shift + 8
	Internet Radio	+	Shift + 6
	Bluetooth	+	Shift + 9
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Source		AV / Input / RDS
	Stop		Stop / Hold

Original	Replacement		
	iINFO		Info / Angle
	Connect		Menu / Home
	Volume+		Vol+
	Source Direct		Display / Media
	Mute		Mute / Dimmer
	Volume-		Vol-
	Option	+	Shift + Setup / OPT / Tools
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Setup		Setup / OPT /
	1		1
	2		2
	3		3





Original	Replacement
CD Power	Power
AMP Power	Shift + Power
I<<	I<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Source	AV / Input / RDS
Stop	Stop / Hold
Info	Info / Angle
Pure Direct	Smart / List
Connect	Menu / Home
Volume+	Vol+
Source Direct	Display / Media
Mute	Mute / Dimmer
Volume-	Vol-
Program	TV/Radio /
Option	Shift + Setup / OPT / Tools

Original	Replacement
Up	Up
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down	Down
Setup	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-



