



Original		Replacement		Original		Replacement	
	Syst em Power Off		+  Shift + Power		Tuni ng-		<< / Tune-
	Syst em Power		Power		Band		Smart / List
	1		1		Tuni ng+		>> / Tune+
	2		2		Vol ume+ /		Vol +
	3		3		Pres et +		>> / Pres et +
	4		4		Pres et -		I << / Pres et -
	5		5		Vol ume- / Sel ect		Vol -
	6		6		Sl eep		Sl eep / Ti mer
	7		7		Funct i on		Di spl ay / Medi a
	8		8		Mbde		Menu / Home
	9		9				
	10		0				
	+10		Gui de / EPG / - / - -				
	TAPE CD SRS		Zoom / Si ze				
	Di mmer		Mute / Di mmer				
	Ti me / Panel		Text / Goto				
	RDS		AV / I nput / RDS				





Original	Replacement	Original	Replacement
 Syst em Power Off	 +  Shift + Power	 Repeat	 Green / APP / Repeat
 Syst em Power	 Power	 Time Edit	 Set up / OPT /
 1	 1	 Dimmer	 Mute / Dimmer
 2	 2	 Time / Panel	 Text / Goto
 3	 3	 RDS	 AV / Input / RDS
 Prog / Direct	 TV/ Radi o /	 Band	 Info / Angle
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 Stop	 Stop / Hold
 Cal l	 OK	 Play / Pause	 Play / Slow
 7	 7	 Volume+ /	 Vol +
 8	 8	 Preset + / >>	 >> / Preset +
 9	 9	 Preset - / I <<	 I << / Preset -
 Clear	 Exit / Cancel / Clear	 Volume- / Select	 Vol -
 10	 0	 Tape <>	 +  Shift + Pause / Step /
 +10	 Guide / EPG / - / -	 Sleep	 Sleep / Timer
 Random	 Blue / Prime Video / Random	 Function	 Smart / List



Pag. 3 / 6



Original	Replacement	Original	Replacement
Syst em Power Off	+ Shift + Power	Repeat	Green / APP / Repeat
Syst em Power	Power	MD	Di spl ay / Medi a
1	1	Di mmer	Mut e / Di mmer
2	2	Ti me / Panel	Text / Got o
3	3	RDS	AV / I nput / RDS
Prog / Di rect	TV/ Radi o /	Band	I nf o / Angl e
4	4	<<	<< / Tune-
5	5	>>	>> / Tune+
6	6	St op	St op / Hol d
Cal l	OK	Pl ay / Pause	Pl ay / Sl ow
7	7	Vol ume+ /	Vol +
8	8	Preset + / >>	>> / Preset +
9	9	Preset - / I <<	I << / Preset -
Cl ear	Exi t / Cancel / Cl ear	Vol ume- / Sel ect	Vol -
10	0	Tape <>	+ Shift + Pause / Step /
+10	Gui de / EPG / - / -	Sl eep	Sl eep / Ti mer
Random	Bl ue / Pri me Vi deo / Random	Functi on	Sm art / Li st



Pag. 5 / 6



Original	Replacement	Original	Replacement
Syst em Power Off	+ Shift + Power	TAPE St op	St op / Hol d
Syst em Power	Power	TAPE >>	>> / Tune+
1	1	TAPE Pl ay	Pl ay / Sl ow
2	2	Vol ume+ /	Vol +
3	3	Tape <<	Smart / Li st
4	4	Vol ume- / Sel ect	Vol -
5	5	Sl eep	Sl eep / Ti mer
6	6	Funct i on	Di spl ay / Medi a
7	7	Mode	Menu / Home
8	8		
9	9		
+10	0		
+10	Gui de / EPG / - / - -		
TAPE CD SRS	Zoom / Si ze		
Di mmer	Mute / Di mmer		
Ti me / Panel	Text / Got o		
TAPE <<	<< / Tune-		

