



Original		Replacement		Original		Replacement	
	Sl eep		Sl eep / Ti mer		CH/ Page-		CH- / Page-
	Power		Power		Mut e		Mut e / Di mmer
	CBL/ SAT		1		Vol ume-		Vol -
	Medi a Pl ayer		2		I nf o		I nf o / Angl e
	Bl u- ray		3		Opt i on		Shift + Set up / OPT / Tool s
	Game		4		Up		Up
	AUX1		Gui de / EPG / - / -		Left		Left
	AUX2		0		Ent er		OK
	Tv Audi o		7		Ri ght		Ri ght
	Phono		5		Back		Back / Ret urn
	Tuner		6		Down		Down
	USB		8		Set up		Set up / OPT /
	Bl uet oot h		9		I <</ Tune-		I << / Preset -
	I nter net Radi o		Fav / Marker / PC		Pl ay		Pl ay / Sl ow
	..l:l..		Smart / List		Pause		Pause / Step / Freeze
	CH/ Page+		CH+ / Page+		>>I / Tune+		>>I / Preset +
	Vol ume+		Vol +		Qui ck Sel ect 1		Red / Netfl ix / Search



Pag. 2 / 3



Original	Replacement	Original	Replacement
SLEEP	Sleep	CH / Page-	CH / Page-
Power	Power	Mute	Mute / Dimmer
CBL / SAT	1	Volume-	Vol -
Media Player	2	Up	Up
Blu-ray	3	Left	Left
Game	4	Enter	OK
AUX1	Guide / EPG / - / - / -	Right	Right
AUX2	0	Back	Back / Return
Tv Audio	7	Down	Down
Phono	5	I << / Tune-	I << / Preset-
Tuner	6	Play	Play / Slow
USB	8	Pause	Pause / Step / Freeze
Bluetooth	9	>> / Tune+	>> / Preset+
Internet Radio	PC Fav / Marker / PC	Quick Select 1	Red / Netflix / Search
SLEEP	LIST Smart / List	Quick Select 2	Green / APP / Repeat
CH / Page+	CH+ / Page+	Quick Select 3	Yellow / YouTube / Repeat
Volume+	Vol +	Quick Select 4	Blue / Prime Video / Random

