



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Tune-		Tune- / Preset-
	Tune+		Tune+ / Preset+
	Eco		Subtitle / EQ
	Sleep		Sleep / Timer
	Internet Radio		TV/ Radio /
	Set up		Set up / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Volume+		Vol +
	CH/ Page+		CH+ / Page+
	Audio		Audio / Lang 1/11
	Volume-		Vol -
	Phono		Display / Media
	CH/ Page-		CH- / Page-
	CBL/ SAT		1
	DVD		2
	CD		3
	Game		4
	Tv Audio		5
	Tuner		6
	AUX1		7
	USB		8
	Bluetooth		9
	AUX2		Guide / EPG / -/-
	Blu-ray		0



Pag. 2 / 4



Original	Replacement	Original	Replacement
	Sl eep		Sl eep / Ti mer
	Power		Power
	CBL/ SAT		1
	DVD		2
	Bl u- ray		0
	Game		4
	AUX1		7
	Medi a Pl ayer		Fav / Marker / PC
	Tv Audi o		5
	AUX2		Gui de / EPG / - / -
	Tuner		6
	USB		8
	CD		3
	Bl uet oot h		9
	: : I : :		Audi o / Lang I / II
	Phono		Di spl ay / Medi a
	I nt er net Radi o		TV/ Radi o /

Original	Replacement	Original	Replacement
	CH/ Page+		CH+ / Page+
	Vol ume+		Vol +
	CH/ Page-		CH- / Page-
	Mut e		Mut e / Di mmer
	Vol ume-		Vol -
	Up		Up
	Lef t		Lef t
	Ent er		OK
	Ri ght		Ri ght
	Back		Back / Ret ur n
	Down		Down
	I <</ Tune-		I << / Preset -
	Pl ay		Pl ay / Sl ow
	Pause		Pause / Step / Freeze
	>>/ Tune+		>> / Preset +
	Qui ck Sel ect 1		Shi ft + 1
	Qui ck Sel ect 2		Shi ft + 2



[illegible]