



	Original	Replacement	
	Source Power	SHIFT +	Shift + Power
	On / Standby		Power
	Video Input		AV / Input / RDS
	Channel -		CH- / Page-
	Channel +		CH+ / Page+
	1	SHIFT +	Shift + 1
	2	SHIFT +	Shift + 2
	3	SHIFT +	Shift + 3
	Prog/Dir		TV/Radio /
	DVD		2
	Tuner		6
	AUX		7
	4	SHIFT +	Shift + 4
	5	SHIFT +	Shift + 5
	6	SHIFT +	Shift + 6
	Random		Blue / Prime Video / Random
	Play		Play / Slow

	Original	Replacement	
	Still / Pause		Pause / Step / Freeze
	7	SHIFT +	Shift + 7
	8	SHIFT +	Shift + 8
	9	SHIFT +	Shift + 9
	Repeat		Green / APP / Repeat
	0	SHIFT +	Shift + 0
	+10	SHIFT +	Shift + Guide / EPG / -/-
	Call		Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	Stop / Band		Stop / Hold
	Left / Tuning-		Left / Preset-
	Right / Tuning+		Right / Preset+
	Mode		Picture / Format
	Search Mode		Red / Netflix / Search
	Volume+		Vol +
	Memo		Rec / Rec Mode
	Zoom		Zoom / Size





Original	Replacement	Original	Replacement
<< Slow/Search	<< / Tune-	Push/Enter	OK
Slow/Search >>	>> / Tune+	Right	Right
Display	Display / Media	Sleep	Sleep / Timer
DVS/Cinema	Smart / List	Down	Down
Status	Text / Goto	Mute	Mute / Dimmer
Top Menu	D. Menu / Top	Help	Eject / Surround
Volume-	Vol -		
RDS	Shift + AV / Input / RDS		
Audio/PTY	Set up / OPT /		
Subtitle/RT	Subtitle / EQ		
Angle/CT	Info / Angle		
Return	Back / Return		
Menu/Guide	Menu / Home		
Tone/SDB	Sound / Title		
Noting	Shift + Zoom /		
Up	Up		
Left	Left		

