



Original	Replacement
Off	+ Shift + Power
On/Source	Power
Main OFF	+ Shift + Rec / Rec Mode
Main ON	Rec / Rec Mode
Shift	Smart / List
Channel-	CH- / Page-
Channel+	CH+ / Page+
Quick Select 2	+ Shift + 2
Quick Select 3	+ Shift + 3
1/PHONO	1
2/CD	2
3/Tuner	3
Quick Select 1	+ Shift + 1
DVD/HDP	Blue / Prime Video / Random
TV/CBL	TV/Radio /
VCR	+ Shift + 4
4/DVD/HDP	4

Original	Replacement
5/TV/CBL	5
6/VCR	6
Stop	Stop / Hold
7/DVR	7
8/V.AUX	8
9	9
Play	Play / Slow
AUX	+ Shift + 7
0/iPod	0
+10/DTU	Guide / EPG / -/-
Skip+/Favorite	Fav / Marker / PC
Cinema	Setup / OPT /
Music	Sound / Title
STD	Text / Goto
Pause/A/B	Pause / Step / Freeze
Tuning+/Tv	+ Shift + Vol+
>>	>> / Tune+





Original	Replacement
Vol+	Vol+
Tuning-/Tv Vol-	Shift + Vol-
D/ST	Picture / Format
Pure	Zoom / Size
SIMU	Red / Netflix / Search
<<	<< / Tune-
Mode/DVD	Shift + D.Menu / Top Menu
A.Menu/Setup	D.Menu / Top
Input/Audio	AV / Input / RDS
>>I/CH+	>>I / Preset+
Vol-	Vol-
I<</CH-	I<< / Preset-
Band/Pic.Adj	Green / APP / Repeat
Muting	Mute / Dimmer
Memory/Subtitl	Subtitle / EQ
Test/Display	Shift + Display / Media
Return	Shift + Back / Return

Original	Replacement
V.Select/Setup	Shift + Menu /
Up	Up
Night/Audio	Audio / Lang I/II
Left	Left
CH Sel/Enter	OK
Right	Right
Display	Display / Media
Down	Down
Status/Return	Back / Return
Dimmer/Menu/Gui	Menu / Home
















Original	Replacement
 Off	 +  Shift + Power
 On/Source	 Power
 Channel-	 CH- / Page-
 Channel+	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 Stop	 Stop / Hold
 7	 7
 8	 8
 9	 9
 Play	 Play / Slow
 0	 0
 +10	 Guide / EPG / -/-

Original	Replacement
 Skip+/Favorite	 Fav / Marker / PC
 Pause/A/B	 Pause / Step / Freeze
 Tuning/Tv Vol+	 +  Shift + Vol+
 >>	 >> / Tune+
 Vol+	 Vol+
 Tuning/Tv Vol-	 +  Shift + Vol-
 <<	 << / Tune-
 >>	 >> / Preset+
 Vol-	 Vol-
 Band/Pic.Adj	 Green / APP / Repeat
 Muting	 Mute / Dimmer
 Memory/Subtitl	 Subtitle / EQ
 V.Select/Setup	 +  Shift + Display / Media
 Up	 Up
 Night/Audio	 Audio / Lang I/II
 Left	 Left





Original	Replacement
 Off	 Shift + Power
 On/Source	 Power
 Stop	 Stop / Hold
 Play	 Play / Slow
 Skip+/Favorite	 Fav / Marker / PC
 Pause/A/B	 Pause / Step / Freeze
 >>	 >> / Tune+
 Vol+	 Vol+
 <<	 << / Tune-
 >>	 >> / Preset+
 Vol-	 Vol-
 <<	 << / Preset-
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right

Original	Replacement
 Down	 Down

