


Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Reset		Exit / Cancel / Clear
	Rec Mute		Mute / Dimmer
	<< Deck		Down
	>> Deck		Up
	Stop Deck		OK
	< Deck		Left
	> Deck		Right
	Time Side A/B		Back / Return
	Tuner		Shift + 6
	Tuner		Smart / List
	Function		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	Preset Down		I<< / Preset-
	Preset Up		>>I / Preset+
	Memo		Rec / Rec Mode
	+10		Guide / EPG / -/--
	Tuning Down		<< / Tune-
	Tuning Up		>> / Tune+
	Band		Play / Slow
	Vol+		Vol+
	RDS		AV / Input / RDS
	PTY		Stop / Hold
	CT		Sound / Title

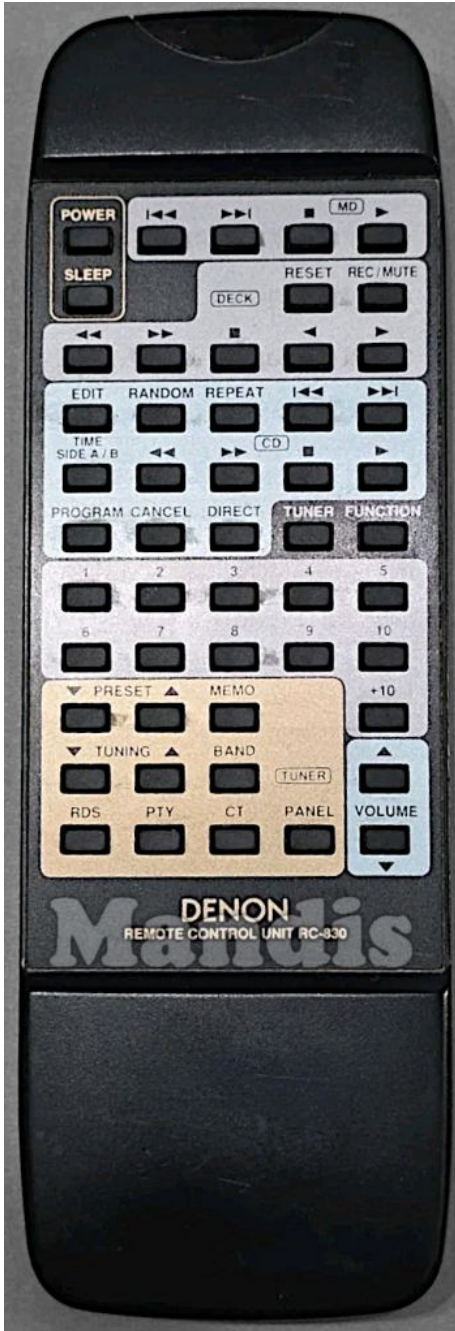



Original	Replacement
Power	Power
I<< MD	Shift + I<< / Preset-
>>I MD	Shift + >>I / Preset+
Stop MD	Shift + Stop /
Play MD	Shift + Play /
Sleep	Sleep / Timer
Edit	Setup / OPT /
Random	Blue / Prime Video / Random
Repeat	Green / APP / Repeat
I<< CD	I<< / Preset-
>>I CD	>>I / Preset+
Time	Display / Media
<< CD	<< / Tune-
>> CD	>> / Tune+
Stop CD	Stop / Hold
Play CD	Play / Slow
Program	TV/Radio /

Program

Original	Replacement
Cancel	Exit / Cancel / Clear
Direct	Smart / List
Tuner	Shift + 6
Function	Menu / Home
1 CD	1
2 CD	2
3 CD	3
4 CD	4
5 CD	5
6 CD	6
7 CD	7
8 CD	8
9 CD	9
10 CD	0
+10 CD	Guide / EPG / -/-
Vol+	Vol+
Vol-	Vol-

