



Original	Replacement	Original	Replacement
Open/Close	Eject / Surround	Pause	Pause / Step / Freeze
On/Standby	Power	7	7
SDB/Tone	Audio / Lang I/II	8	8
Dimmer	Shift + Mute / Dimmer	9	9
Sleep	Sleep / Timer	Rep 1/All	Green / APP / Repeat
1	1	0/10	0
2	2	+10	Guide / EPG / -/-
3	3	Stop/ Band	Stop / Hold
Prog/Di r	TV/ Radio /	I << / Tuning-	I << / Preset-
CD	Shift + 3	>> / Tuning+	>> / Preset+
Tuner	Shift + 6	Call	Info / Angle
Aux	Shift + 7	Clear	Exit / Cancel / Clear
4	4	<< Search	<< / Tune-
5	5	>> Search	>> / Tune+
6	6	Vol +	Vol +
Random	Blue / Prime Video / Random	DAB/XM/RDS	Smart / List
Play	Play / Slow	PTY	Text / Goto





MUTE

