 



 

 









 

 
 


 

 






 






 





 











 

 

 













 















Original	Replacement
 Source Power	 Shift + Power
 On/Standby	 Power
 Subwoofer Level-	 CH- / Page-
 Subwoofer Level+	 CH+ / Page+
 Audio RDS	 AV / Input / RDS
 DVD/CD	 Shift + 2
 DVD/CD	 Shift + 3
 FM/AM	 Shift + 6
 AUX	 Shift + 7
 Subtilte/PTY	 Subtitle / EQ
 Angle/CT	 Shift + Info / Angle
 Zoom/RT	 Zoom / Size
 iPod	 Shift + 5
 Net/USB	 Shift + 8
 Display	 Display / Media
 1	 1
 2	 2

Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 Play	 Play / Slow
 Stop	 Stop / Hold
 7	 7
 8	 8
 9	 9
 DVS/Stereo	 Sound / Title
 Clear	 Exit / Cancel / Clear
 0	 0
 +10	 Guide / EPG / -/--
 Still/Pause	 Pause / Step / Freeze
 Call	 Picture / Format
 Program	 TV/Radio /
 Random	 Blue / Prime Video / Random





Original	Replacement
 Repeat	 Green / APP / Repeat
 Vol+	 Vol+
 HDMI	 Shift + 0
 Status	 Info / Angle
 Tone	 Audio / Lang I/II
 I<</Channel-	 I<< / Preset-
 >>I/Channel+	 >>I / Preset+
 Vol-	 Vol-
 Sleep	 Sleep / Timer
 <</Tuning-	 << / Tune-
 >>/Tuning+	 >> / Tune+
 Mute	 Mute / Dimmer
 Top Menu	 D.Menu / Top
 Menu/Guide	 Menu / Home
 Surround	 Eject / Surround
 Surround	 Text / Goto
 Memo	 Fav / Marker / PC

Original	Replacement
 Up	 Up
 Left	 Left
 Push/Enter	 OK
 Right	 Right
 Tool	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Home	 Smart / List
 Home	 Shift + Menu /





	Original	Replacement	
	Source Power	+	Shift + Power
	On/Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol+
	Channel-		CH- / Page-
	Channel+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer

Original	Replacement



