



	Original	Replacement		Original	Replacement
	On/Standby		Power		
	Source Power		Shift + Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	Channel+		Ch +		
	Channel-		Ch -		







Original	Replacement	Original	Replacement
 On/Standby	 Power	 I<</Channel-	 I<<
 Play	 Play	 >>/Tuning+	 >>
 Stop	 Stop	 <</Tuning-	 <<
 Still/Pause	 Pause	 DVS/Stereo	 Dual
 Mute	 Mute	 Display	 Info
 Vol+	 Vol +	 Subwoofer Level+	 Ch +
 Vol-	 Vol -	 Subwoofer Level-	 Ch -
 Push/Enter	 Ok	 Source Power	 Shift + Power
 Up	 Up	 DVD/CD	 Red
 Down	 Down	 FM/AM	 Green
 Right	 Right	 AUX	 Yellow
 Left	 Left	 iPod	 Blue
 Menu/Guide	 Guide	 Home	 Smart
 Top Menu	 Menu	 Net/USB	 Media
 Return	 Back	 1	 1
 Tool	 Options	 2	 2
 >>I/Channel+	 >>I	 3	 3








 
 
 






 








	Original	Replacement
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	+10	 Pre Ch
	Clear	 Exit
	HDMI	 +  Shift + Media
	Sleep	 Sleep
	Call	 +  Shift + Pre Ch
	Program	 +  Shift + Sleep
	Repeat	 Text
	Random	 TV/R
	Status	 AV
	Tone	 List

	Original	Replacement
	Audio RDS	 +  Shift + Dual
	Subtilte/PTY	 Subt
	Angle/CT	 3D
	Zoom/RT	 Eject
	Surround	 Format
	Surround	 D. Menu
	Memo	 Rec





























Original	Replacement	Original	Replacement
 On/Standby	 Power		
 Source Power	 Shift + Power		
 Channel+	 Ch +		
 Channel-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		





Original	Replacement	Original	Replacement
 On/Standby	 Power		
 Source Power	 Shift + Power		
 Play	 Play		
 Stop	 Stop		
 Still/Pause	 Pause		
 >>	 >>		
 <<	 <<		
 Channel+	 Ch +		
 Channel-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		

